


TEAC

INSTRUCTION MANUAL


TOWER SPEAKER WITH BLUETOOTH
& PLL FM STEREO RADIO

MODEL: BTT500

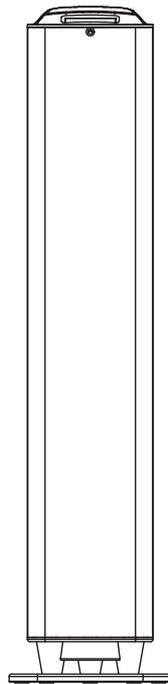


Please read following instructions prior to operating your unit.


Manufacturer of this unit follows a principle of continuous improvement and has no responsibility for any changes that are made to the unit nor any liability for these changes. Thanks for your choice of our products.

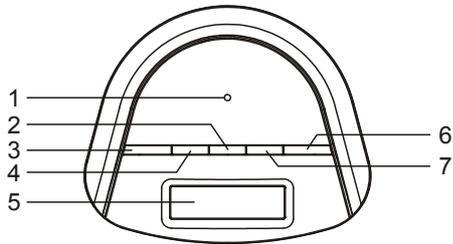

MAIN UNIT

- 1. BLUETOOTH INDICATOR
- 2. STANDBY BUTTON
- 3. VOL+/- BUTTONS
- 4. SOURCE BUTTON
- 5. LCD DISPLAY
- 6. FM TUNING/SKIP/SEARCH UP/DOWN BUTTONS
- 7. PAIR/PLAY/PAUSE BUTTON
- 8. REMOTE SENSOR
- 9. AUX IN JACKS
- 10. LINE IN JACK
- 11. RESET BUTTON
- 12. AC CORD

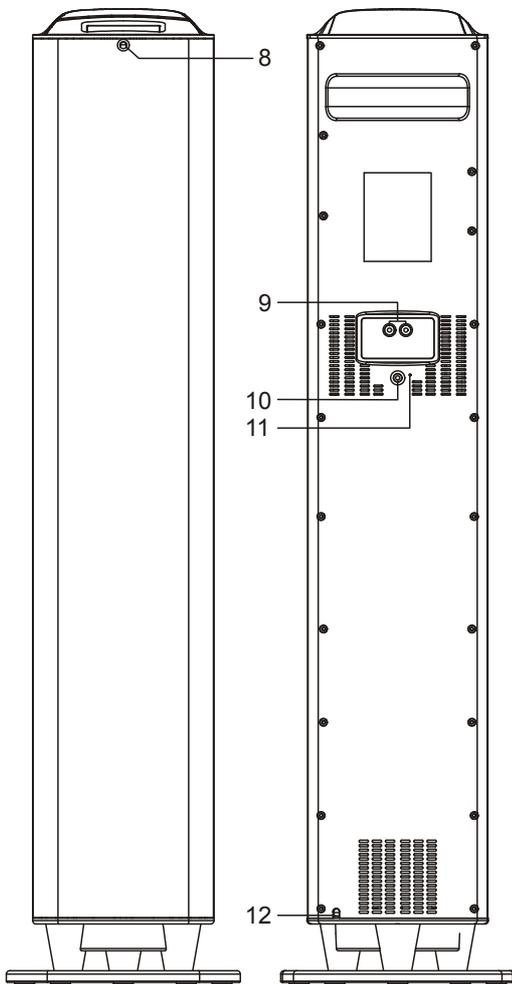

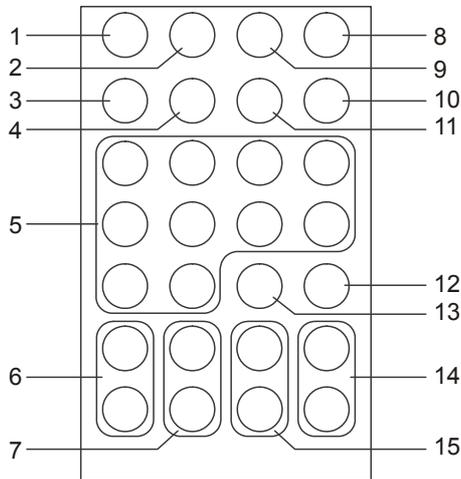

REMOTE CONTROL

1. SOURCE BUTTON
2. MUTE BUTTON
3. MEM BUTTON
4. CH- BUTTON
5. NUMERIC BUTTONS
6. BASS +/- BUTTONS
7. TREBLE +/- BUTTONS
8. STANDBY BUTTON
9. PAIR/PLAY/PAUSE BUTTON
10. MO/ST BUTTON
11. CH+ BUTTON
12. CLOCK BUTTON
13. SLEEP BUTTON
14. TUNING/SKIP/SEARCH UP/DOWN BUTTONS
15. VOL +/- BUTTONS

POWER SUPPLY

Plug AC plug into the outlet socket on the unit for connecting the main power.

Note: During playback, if not any operation in about 6 hours, the unit will switch to standby mode automatically.

SLEEP TIMER SETTING

You can set the sleep timer at power on modes as following instructions:

Press SLEEP button on the remote control repeatedly to cycle through the sleep time options:

90 ➡ 80 ➡ 70 ➡ 60 ➡ 50 ➡ 40 ➡ 30 ➡ 20 ➡ 10 ➡ OFF

After the sleep time setting, you can play the unit freely. Once the sleep time is expired, the unit will be switched off.

During playback, press SLEEP button once to check the remaining sleep time.

HOW TO SET TIME

In standby mode, press and hold CLOCK button on the remote until Hour flashes on the screen with "CLK" shows on the screen; use TUNING UP/DOWN button on the remote to adjust the hour and confirm your adjustment by pressing CLOCK button on the remote; Minute starts blinking on the screen, press TUNING UP/DOWN button on the remote to set the minute accordingly, press CLOCK button on the remote again to confirm your setting. During playback, press CLOCK button to check the current time.

The time can only be set in standby mode.

BLUETOOTH OPERATING

This unit can receive stereo audio signal from a BLUETOOTH stereo audio source device.

1. Power on the unit, switch to BLUETOOTH mode by pressing SOURCE repeatedly.
2. LED indicator rapid blinking while it is pairing.

3. Pair and connect to F-3088 on the BLUETOOTH audio source device. If prompted for passcode, enter "0000".
4. Pairing successful (LED indicator blue), ready to stream music.
5. Press PLAY/PAUSE button to pause or start the playback.
6. During playback, press TUNING UP/DOWN button to skip to the next or previous track. Press and hold TUNING UP/DOWN button to search through the current track forward or backward.

Note:

- Pairing mode is canceled about 1.5 minutes.
- The above are generic steps to pair a BLUETOOTH device, for more specific instructions on BLUETOOTH connectivity for your device, please consult your manufacturer's manual.

RE-CONNECT TO THE BLUETOOTH AUDIO SOURCE DEVICE

If the device is already paired with the F-3088, but became unconnected even with both Bluetooth devices turned on. You can re-connect them by following steps:

1. Press and hold the PAIR button to re-link the audio source device. The Bluetooth indicator will blink for about 1.5 minutes for connecting.
2. Select F-3088 on the audio source device for connecting. Bluetooth indicator will turn to solid blue if the F-3088 and the device have been re-connected successfully.
3. You can also re-connect the F-3088 by using Bluetooth operation of the device to be connected.

FM RADIO

TUNING THE FM RADIO

1. Power on the unit, switch to TUNER(RADIO) mode by pressing SOURCE repeatedly.
2. Press TUNING UP/DOWN button to fine tune radio station. Press and hold TUNING UP/DOWN button to auto search radio station forward or backward respectively (When an available station can be found, the unit will broadcast it immediately and the searching will be stopped).
3. In radio mode, it is possible to access the frequency via numeric buttons on the remote control. For example, press buttons 8, 9 and 8 to get to 89.8 MHz; If you enter a wrong frequency, "ERROR" will display on the screen.
4. During radio playback, press MO/ST button on the remote to switch between FM STEREO and FM MONO modes.

STORING YOUR FAVORITE RADIO STATION

1. During playback, press MEM button on the remote for storing the current station until memory cell number flashes on the screen.
2. Use CH+ or CH- button on the remote to select the corresponding memory cell among P01-P20 for storing the station.
3. Confirm your selection by pressing MEM button on the remote.
4. During radio playback, press CH+ or CH- button on the remote repeatedly to recall the stored stations.

MUTE THE UNIT

During playback, press MUTE button to switch off the audio. Press the button again to resume the audio.


VOLUME LEVEL/TREBLE/BASS ADJUSTMENT

Press VOL +/- buttons or TREBLE +/- buttons or BASS +/- buttons to adjust the volume output level or treble effect or bass effect.

RESET BUTTON

When using the unit, you may come across a problem that the unit doesn't work or halts accidentally; you can use a needle or a small, slender implement to poke the RESET button in the rear of the player, the unit will turn off automatically and then please reboot the unit, the unit will recover the normal mode.

CONNECTING WITH OTHER APPLIANCES

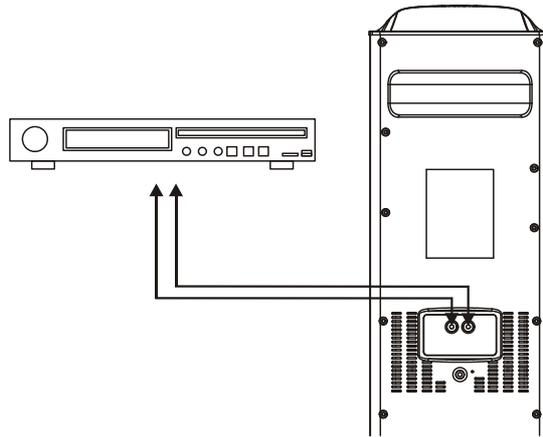

AUX IN

1. Connect the AUX IN jacks on the unit to audio source, for example, DVD player with an RCA cable.
2. Press STANDBY button to turn the unit on.
3. Press SOURCE button repeatedly to switch to AUX mode.
4. Use the controls on the connected audio device to begin playing music through the BTT500 tower speaker.

LINE IN

Follow steps to connect the unit to another audio device:

1. Connect the device into the player LINE IN jack with the LINE OUT cables.
2. Press STANDBY button to turn the unit on.
3. Press SOURCE button repeatedly to switch the unit to Line In mode.
4. Power on the device and begin play.

TROUBLE SHOOTING

Symptom	Possible Cause	Solution
Radio sound distorted.	1. The station is not tuned in. 2. There is a poor signal in the area.	1. Fine tune the station. 2. Reposition the unit.
No radio sound.	1. The unit is not in tuner mode. 2. The volume has been muted or is on the minimum setting.	1. Press SOURCE button repeatedly until switching to tuner. 2. Adjust the volume level or press MUTE button to resume audio.

IMPORTANT SAFETY INSTRUCTIONS

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- When the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable. To completely disconnect the power input, the mains plug of the apparatus or the appliance coupler shall be disconnected from the mains completely.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Minimum distances 2.0cm around the apparatus for sufficient ventilation. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- The use of apparatus is in tropical and/or moderate climates.
- Attention should be drawn to the environmental aspects of battery disposal.
- CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- The marking plate is located at the back of the apparatus.